


5873

Speedy Andrew's Repairshop

THE SCALE OF
THIS MODEL IS
1/87 ACTUAL SIZE
OR
APPROX. 1" = 7'3"

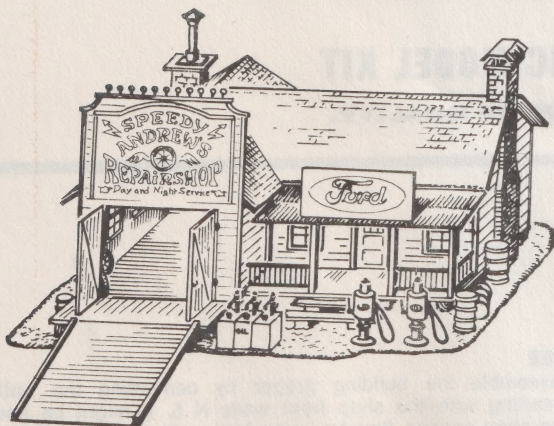

FOR BEST RESULTS * READ THIS FIRST


This kit is molded of styrene plastic and for best assembly results use only cements designed for this material. Apply cement sparingly. Excess cement, particularly on the outside of your kit, may damage the details. Do not let the cement touch Eyes, furniture, or clothing. Carefully trim any excess plastic from the parts before assembling. This will result in better fitting components. Do NOT break parts from their spurs — always cut them apart — otherwise you will have a rough and discolored spot where the break-off occurs.

STEP ONE

Since it is easier to install details on walls when they are „flat“, begin by cementing Windows N 1 into wall openings, followed by Doors N 2. You might want to omit the door from the connecting wall between Shop and living quarters. This is also a good time to mount the Speedy Andrews sign onto the shop front walls as it is easier to do when the wall is „flat.“ You can also cement onto the various wall sections some of the advertisements which are also included with this kit.


STEP TWO

To begin the actual assembly start from the bottom and work up. Take the Base-plate N 3 and remove the pieces molded inside (chimneys) and set them aside. Next take the wooden floor-sections N 4 and also remove the inner pieces (steps & wood-pile) and cement to the Base N 3, making sure that a good fit is assured.

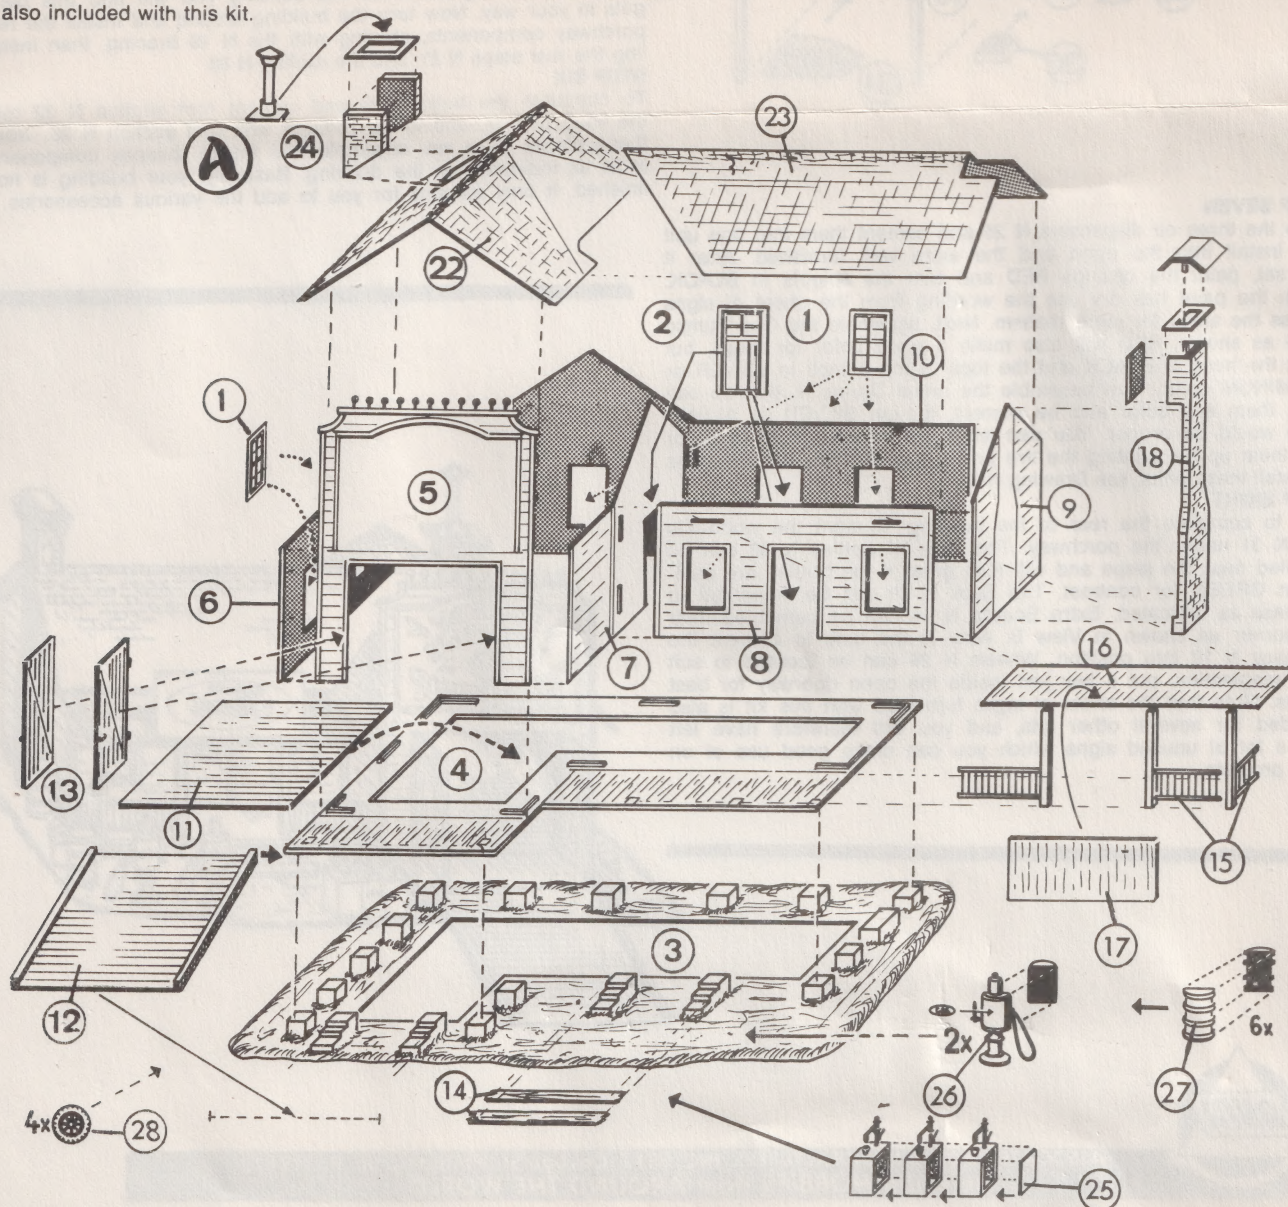

FUN AND EASY TO BUILD PLASTIC MODEL KIT

ALWAYS LOOK FOR THE *AHM* EMBLEM OF QUALITY.

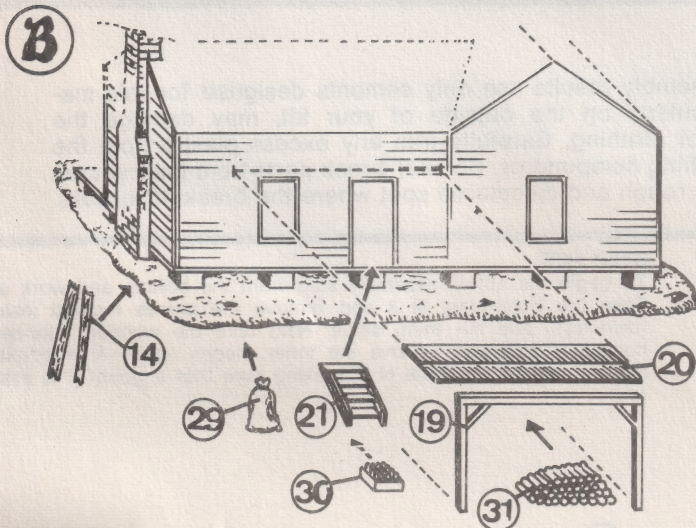

STEP SEVEN

Take the three oil dispensers N 25 and cement them into one unit and install into the open end the extra wall furnished. After it has set, paint the casings RED and trim the spigots in BLACK. When the paint has dry use the wording from the sheet of signs across the sides for more realism. Next, assemble the Gas Pumps N 26 as shown. RED will also make a good color for these, but paint the hose in BLACK and the tops of the pumps in SILVER or ALUMINUM color. Now assemble the metal Drums N 27. You can paint them any color and be correct, though SILVER or ALUMINUM would be proper. You can leave the Wheels N 28 as is, or trim them up by painting the tire portions in BLACK. For locations to install these units, see Drawing N C.

STEP EIGHT

Now to complete the rear of the building. Cement the wood-pile unit N 31 under the porchway. The case of bottles N 30 can be installed near the steps and will look great if the bottles are painted in GREEN for contrast. The Sack N 29 can be cemented to the base as indicated. Extra Boards N 14 can be cemented near the corner as shown in View B. Now is the time to cement the rampway N 12 into position. Wheels N 28 can be located to suit your imagination, put a few just inside the open doorway for best effects. Note that the sheet of signs furnished with this kit is also intended for several other kits, and you will therefore have left over a lot of unused signs which you can make good use of on other projects.

STEP THREE

Start to assemble the building proper by cementing the walls together, starting with the shop front walls N 5. It might be best to erect the shop section first by cementing walls N 6 and N 7 to the front wall, and then adding N 10, the rear walls. Next, place what you have completed, upon the floor section N 4, and when assured of a good fit, cement into place. Then continue to erect the walls around the flooring by adding N 8 and N 9 walls to the building which will complete it.

STEP FOUR


Now that we have the main building walls up, install the shop-decking N 11 inside the shop. Cement the porch-railings N 15 into position and cement the porch roofing N 16 atop them. Before placing the sign-board N 16 in place on the roofs, use the sign from the printed sheet (FORD) and cement it to the plastic unit, and then cement to desired position on the roofing. Install Doors N 13 in "open position" next.

STEP FIVE

Assemble carefully the chimney components N 18 as shown and when it has "set" place it into position against end wall N 9. If you have been giving thought to installing the ramp section N 12, it is suggested that you wait and do this as the very last thing, otherwise, when you handle the building you will find this piece gets in your way. Now turn the building around and install the rear porchway components, starting with the N 19 bracing, then installing the rear steps N 21, and the roofing N 20.

STEP SIX

To complete the building fit and cement roof section N 22 over the shop portion, and follow through with roof section N 23. When these pieces have set, assemble and install chimney components N 24 as indicated on the drawing. Basically, your building is now finished. It only remains for you to add the various accessories.

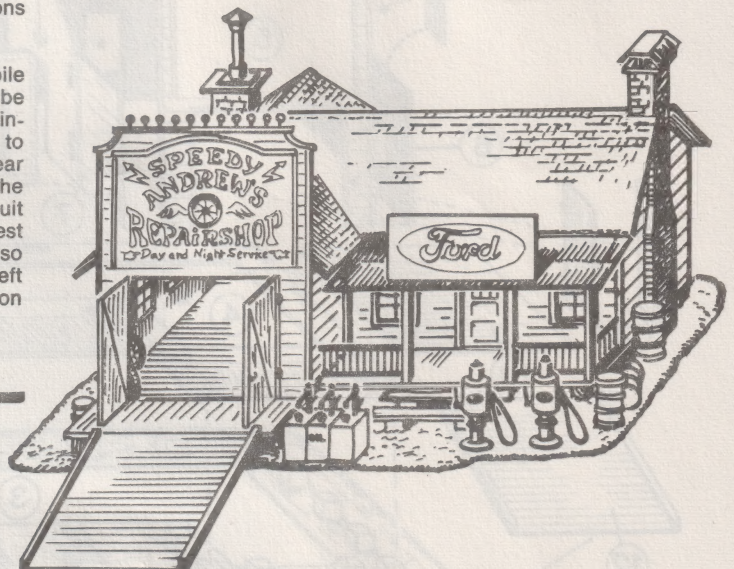

ASSOCIATED HOBBY MANUFACTURERS, INC., 631 E. Cayuga St., Philadelphia, Pa. 19120
The Finest HOBBIES from AROUND THE WORLD